 


WI-PCMS310GF(V2) | WI-PCMS328GF(V2)

## 1. Packing Content



 
Switch x 1




Quick Installation Guide x 1



Serial Line x 1



Power Cord x 1

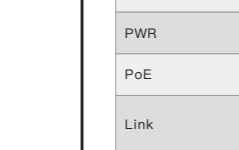

Mounting Accessories  
(hook x 2, mats x 4, screw x 8)


## 2. Appearance Overview

### WI-PCMS310GF

#### • Front panel



#### • Back panel

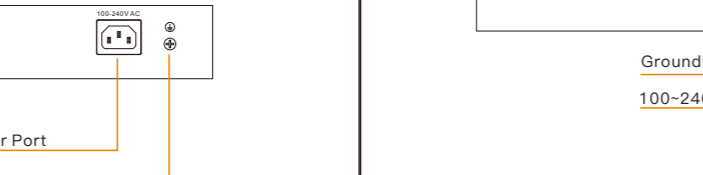


#### • LED indicator and button


LED indicators & button	Description
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PWR	On: The device power on is normal Off: The device is power off or failed
PoE	On: Equipment connected, normal power supply Off: Port not for terminal equipment power supply
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

### WI-PCMS328GF

#### • Front panel

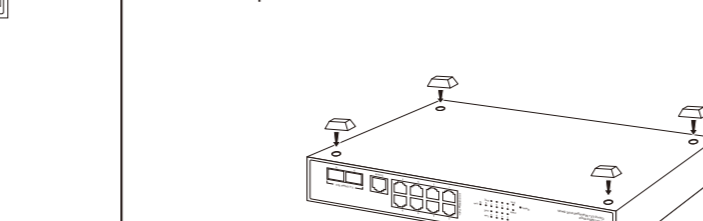

#### • Back panel

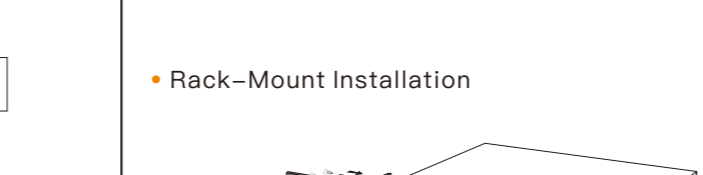


#### • LED indicator and button


LED indicators & button	Description
SYS	Blinking: The Device system is operating normally Off: Device system or power connection abnormality
PWR	On: The device power on is normal Off: The device is power off or failed
PoE	On: Equipment connected, normal power supply Off: Port not for terminal equipment power supply
Link	On: Port connected Blinking: Data transmission Off: Port disconnected
Reset	Hold for >5 sec. to restore factory default

## 3. Installation

### • Desktop Installation

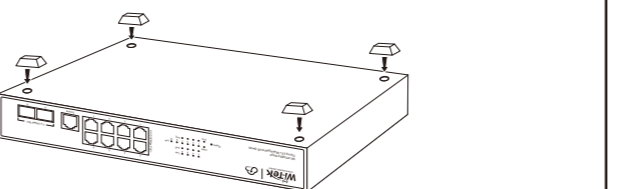

### • Rack-Mount Installation

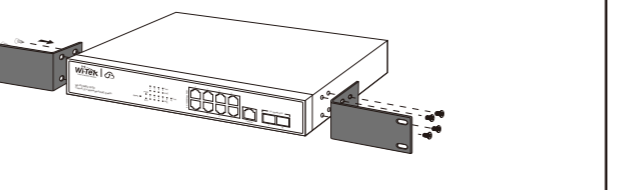


## 4. Configuration

### • Desktop Installation

First, the device is powered on, the Internet is connected to the WAN port of the Gateway, the other one LAN port of the Gateway is connected to the PoE Switch, then the PC is connected to the Switch. Ensure that the PC and the Gateway are in the same subnet.



### • Rack-Mount Installation

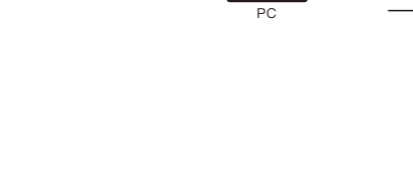

### • Configuration

Step 1 Download a PuTTY software  
Step 2 Use the Console cable to connect the computer and the switch as shown in the above figure

Step 3 Set the com port number of the Console line and the baud rate of the switch in the software (steps as shown in the figure below).

Note:  
Step 2 is your computer recognizes the COM number of the Console line  
Step 3 is the baud rate of the exchange (the baud rate of the switch is 9600)



Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

### • Use Telnet to log in to the CLI mode of the switch


Connection Diagram:



Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch  
Step 2 Open the cmd window of the computer  
Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)

### • Cloud login switch configuration


1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

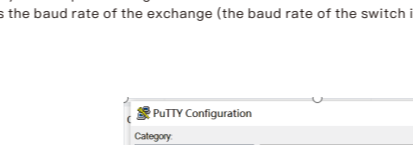

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

### • Cloud login switch configuration

1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

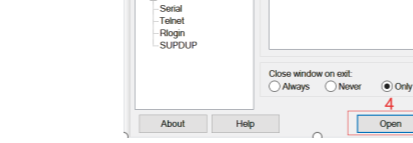

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


2. Enter the cloud binding switch  
(explain: The switch must be connected to the Internet to bind successfully)



Please enter the device serial number to bind a device to the current group, device can be off when binding.  
(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

### • After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.

(After entering the switch, you can configure it based on your own needs)

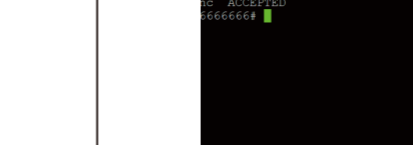

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


### • After binding, you can use the Switch in the Tunnel option in the cloud management, and then choose to use EWEB or TELNET to enter the switch.

(After entering the switch, you can configure it based on your own needs)



Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

2. Enter the cloud binding switch  
(explain: The switch must be connected to the Internet to bind successfully)

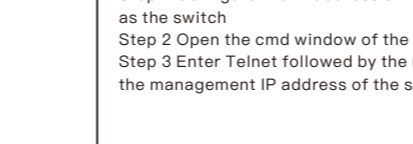

Please enter the device serial number to bind a device to the current group, device can be off when binding.  
(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

### • Use Telnet to log in to the CLI mode of the switch

Connection Diagram:



Step 1 Configure the IP address of the computer and the IP address of the same segment as the switch  
Step 2 Open the cmd window of the computer  
Step 3 Enter Telnet followed by the management IP address of the switch (for example, if the management IP address of the switch is 192.168.0.1, enter Telnet 192.168.0.1)


### • Cloud login switch configuration

1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)



Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


2. Enter the cloud binding switch  
(explain: The switch must be connected to the Internet to bind successfully)

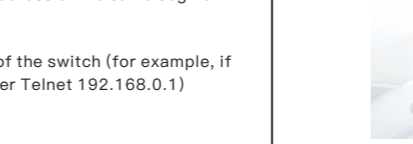

Please enter the device serial number to bind a device to the current group, device can be off when binding.  
(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

### • Cloud login switch configuration

 
1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)



Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


### • Cloud login switch configuration

1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

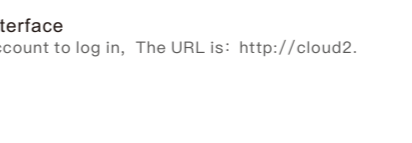

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


2. Enter the cloud binding switch  
(explain: The switch must be connected to the Internet to bind successfully)

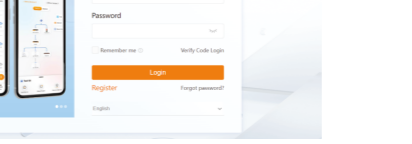

Please enter the device serial number to bind a device to the current group, device can be off when binding.  
(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

### • Cloud login switch configuration

1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

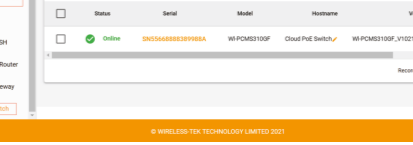

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


### • Cloud login switch configuration

1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)



Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


2. Enter the cloud binding switch  
(explain: The switch must be connected to the Internet to bind successfully)

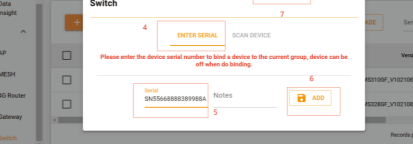

Please enter the device serial number to bind a device to the current group, device can be off when binding.  
(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

### • Cloud login switch configuration


1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

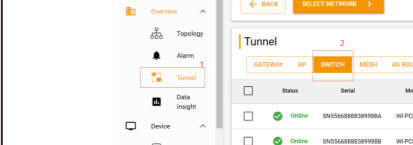

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.


### • Cloud login switch configuration

1. Log in to the cloud management interface  
(No account, you need to register an account to log in, The URL is: <http://cloud2.wireless-tek.com>)

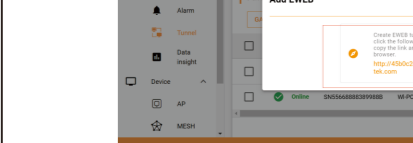

Note: If the switch device is not connected to the cloud platform, the management account password is admin by default. If it is connected to the cloud platform for management, please go to the cloud platform to check the password. The account is admin, and the password is the WEB password you set when creating the project.

2. Enter the cloud binding switch  
(explain: The switch must be connected to the Internet to bind successfully)

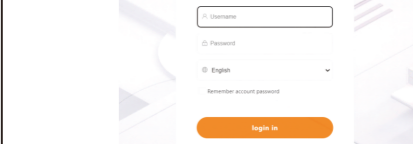

Please enter the device serial number to bind a device to the current group, device can be off when binding.  
(Explanation: The 17-digit SN code of the switch is shown on the sticker on the back of the switch as shown in the figure below)

## Warranty Card

 
Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

\* If the product defects within three months after purchase, we will provide you with a new product of the same model.

\* If the product defects within the three-year warranty period, we will provide professional maintenance service.

\* Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.

\* Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support    Company Website    Cloud Management

Wireless-Tek Technology Limited  
Address: Building 3, Units 1801-1807, 1812,  
Huaqiang Era Plaza, Tangwei Community,  
Fuhai Street, Bao'an District, Shenzhen City,  
Guangdong Province, China.

Website: [www.wireless-tek.com](http://www.wireless-tek.com)  
Tel: 86-0755-32811290

Email: [sales@wireless-tek.com](mailto:sales@wireless-tek.com)  
Technical Support: [tech@wireless-tek.com](mailto:tech@wireless-tek.com)

